

ALBRIGHT INSWINGING LATCH INSTALLATION INSTRUCTIONS

1. Fold on dashed line.

2. With door in closed position place this leaf of instructions on the outside of door with the fold (dashed line) against the wood stop or metal Z-bar, whichever projects farther, and mark the (3) 1/4" diameter hole centers.


3. Drill (3) 1/4" diameter holes straight through the door.

4. Unfold instructions and place on inside of door with (3) 1/4" diameter circles over the (3) holes you drilled in Step #3 and mark location of (2) strike mounting holes on door jamb.

5. Insert square spindle into the inside latch assembly and position on inside of door. Install outside latch assembly and secure with (2) machine screws. If the spindle binds enlarge center hole.

6. Attach strike to wood jamb with Sheet Metal Screws.

NOTE: If latch kit contains key cylinder option use KEY CYLINDER INSTALLATION INSTRUCTIONS included with key cylinder assembly.

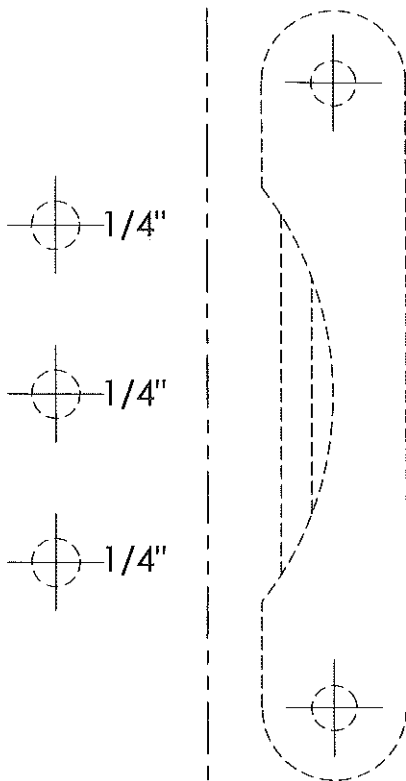

83743, REV A



In-Swing Closer Bracket Installation Instructions

