




Screen Door Filler Strip Installation Instructions

Example Application Where Filler Strip Would Be Required

If working depth is less than 1" a filler strip must be used

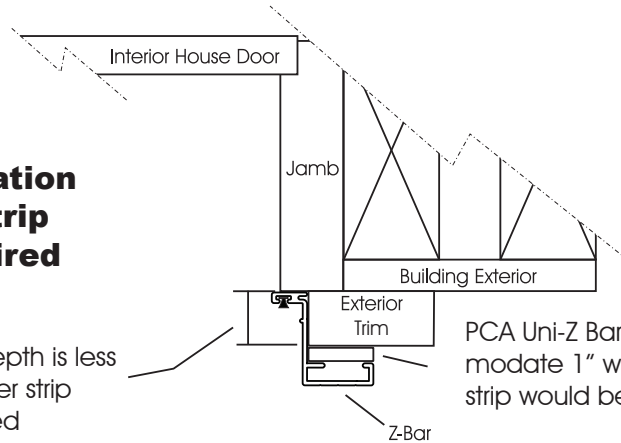

PCA Uni-Z Bar shown will accommodate 1" working depth. Filler strip would be inserted here.

Installer must "prep" the z-bar with filler *BEFORE* installing in opening. Filler will need to be attached to all three pieces of z-bar. (2) Left and right z-bar legs and (1) Z-bar header

STEP 1: Hold filler flush with Z-bar edge and use #8x1" tek screws. (Fig 1)

DO NOT ALLOW SCREW TO GO ALL THE WAY THRU!

Use (3) #8x1" tek screws for the Z-bar header, and (4) #8x1" tek screws for each Z-bar leg (Fig 2)

STEP 2: Z-bar is now "prepped", continue to standard door installation instructions.

